


Serenata

Media Center & Umbrella Light

Assembly and Operation Guide

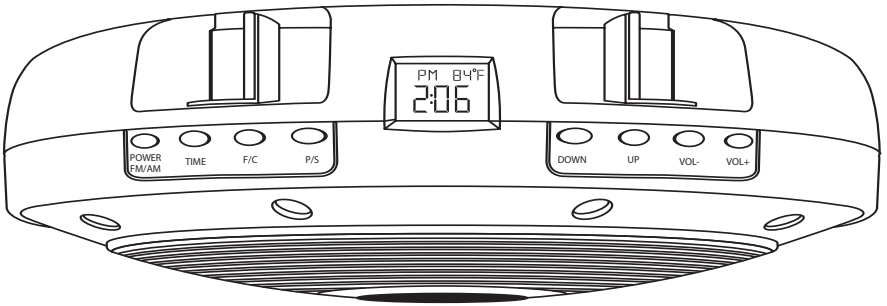


Thank you for your purchase of Treasure Garden's Serenata Wireless Umbrella Light and Media Center.

Please remove all contents from the package, inspect and review checklist.

CAUTION: To reduce personal injury and damage to your umbrella light, read and follow this assembly and operation guide.

SERENATA CHECKLIST


- A - Serenata
- B - Battery Pack
- C - Charger
- D - Remote Control
- E - Music Source Holder
- F - Audio Cable
- G - Adapter Sleeve
- H - Universal Hub Adapter (screws included, adapter for non-Treasure Garden umbrellas)
- I - Cushion Grips (various sizes included)

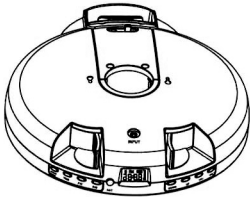


A



B

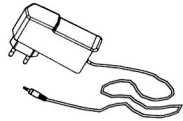

C

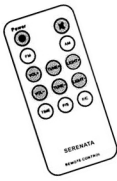

D




E




F



G

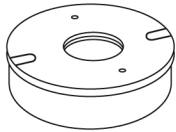


H

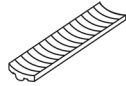

I

STEP 1 Charging the Battery Pack


- a. Grab firmly and pull the battery pack from the Serenata to remove.
- b. Attach the charger to the battery pack and plug into any 110V power source.
The battery is fully charged when the indicator light changes to green (Fig. 1).

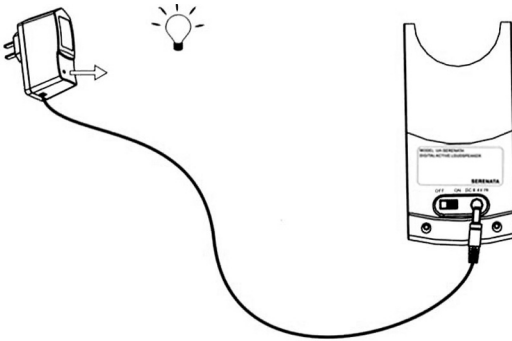

(Fig. 1)

STEP 2 Attaching the Serenata to Umbrella

- a. Grab firmly and pull the battery pack from the Serenata to remove (Fig.2).

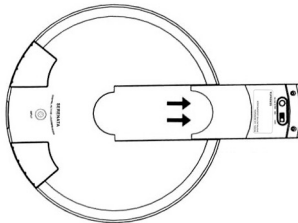


(Fig. 2)


- b. For centerpost market umbrellas, slide the Serenata onto the center post. Note: It may be necessary to squeeze the 2 lock and release tabs on the Serenata to fit onto post.
- c. For Treasure Garden sidepost cantilever style umbrellas, attach Serenata onto adapter on lower hub.
- d. For all other sidepost cantilever styles, attached supplied Universal Hub Adapter (H) to the lower hub and tighten with supplied screws. Attach Serenata onto adapter.

STEP 3 Adjusting the Light Settings


- a. To turn on the lights, switch the battery pack to the "ON" position (Fig. 3).
- b. To adjust the brightness, simply press the "F/C" button on the Serenata (Fig. 4) or press the "LIGHT (+ or -)" button on the remote control (Fig. 5).

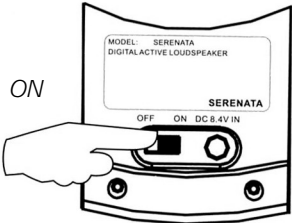

(Fig. 3)

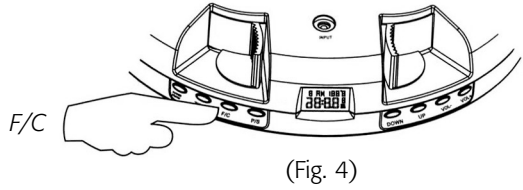


(Fig. 4)

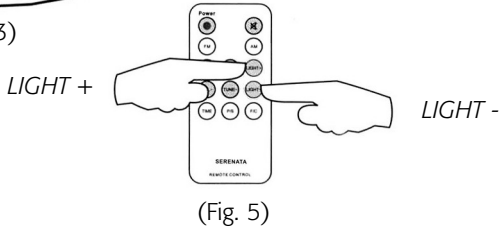


(Fig. 5)

STEP 4 Programming the Radio

- a. Switch the battery pack to the "ON" position.
- b. Press the "POWER/FM/AM" button on the Serenata (Fig. 6) or press the "Power" button on the remote control (Fig. 7).
- c. Position the Serenata for proper reception.

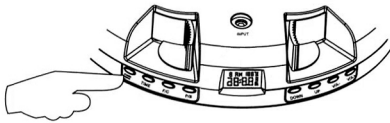


(Fig. 6)

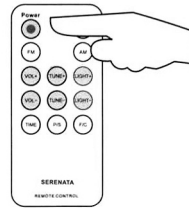


(Fig. 7)


- d. To select FM or AM, press the "POWER/FM/AM" button once again on either the Serenata (Fig. 8) or "POWER" on remote control (Fig. 7).
- e. To select a radio station, press the "UP" or "DOWN" button on the Serenata (Fig. 9) or press the "TUNE (+ or -)" button on the remote control (Fig. 10).

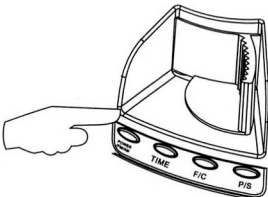

(Fig. 8)

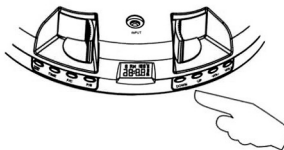


(Fig. 9)

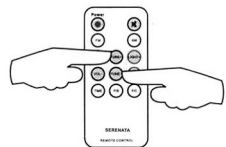


(Fig. 10)

- f. To scan the radio stations, simply **press & hold** the "UP" or "DOWN" button (Fig. 9) or "TUNE (+ or -)" button (Fig. 10) for at least 3 seconds. Scanning will stop automatically when a station is located.
- g. To adjust the volume, press the "Vol. (+ or -)" button on the Serenata (Fig. 11) or on the remote control (Fig. 12).

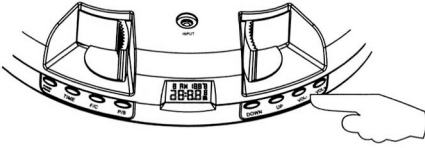


(Fig. 11)

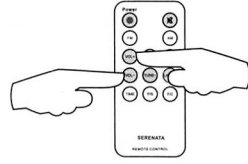


(Fig. 12)

STEP 5 Programming the Radio

- a. Turn the radio on and tune-in the station you want to save.
- b. **Press & hold** the "P/S" button for at least two seconds on the Serenata (Fig. 13) or on the remote control (Fig. 14). The P/S channel will flash on the display screen.

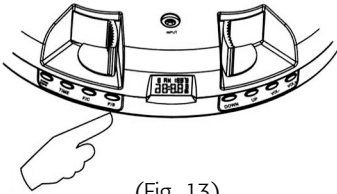

(Fig. 13)

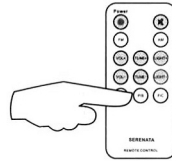


(Fig. 14)


- c. Press the "Vol. (+ or -)" button to select P/S channel.
- d. **Press & hold** the "P/S" button once again for at least 2 seconds to save the radio station. NOTE: Setup will automatically void if Step 5, Figure 14 is not completed within 10 seconds.
- e. The memory can save up to 5 stations on both FM and AM bands.

STEP 6 Setting the Time

- a. **Press & release** the "TIME" button on the Serenata (Fig. 15) or the remote control (Fig. 16). The "hour" will flash on the display screen.

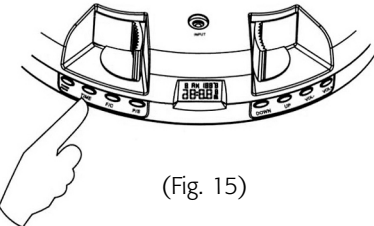

(Fig. 15)

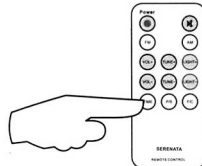


(Fig. 16)


- b. Adjust the hour by pressing the "Vol. (+ or -)" button.
- c. **Press & release** the "TIME" button again and the "minute" will flash.
- d. Adjust the "minute" by pressing the "Vol. (+ or -)" button.
- e. **Press & release** the "TIME" button once again to save the settings.

STEP 7 Temperature Display

- Press & hold the "F/C" button on the Serenata (Fig. 17) or the remote control (Fig. 18) for at least 2 seconds. Fahrenheit will display on the screen.
- Press & hold the "F/C" button again for at least 2 seconds and Celsius will display on the screen.

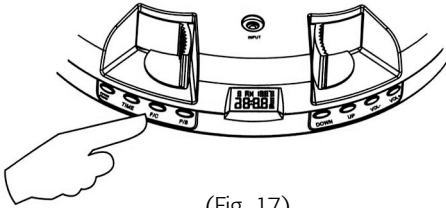


(Fig. 17)

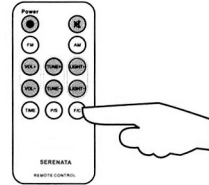

(Fig. 18)

STEP 8 iPod/MP3 Player

- Turn on the radio.
- Turn on the iPod/MP3 player and select the music.
- Insert one end of the audio cable into the output socket on the MP3 player, and then insert the other end of the cable into the input socket on the Serenata (Fig. 19).
- To convert back to radio, simply unplug the cable.

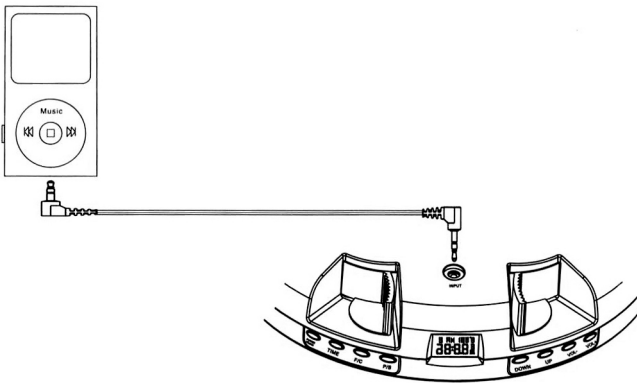

(Fig. 19)

WARRANTY:

Treasure Garden warrants this product (in residential use) to be free from defects in original materials and workmanship for a period of 1 year from the date of purchase.

If a defect in the original material or workmanship appears during the warranty period; Treasure Garden will (at its option) repair or replace the product without charge.

Simply contact your original authorized Treasure Garden dealer with a description of the defect.

The dealer will verify the defect and work closely with Treasure Garden to obtain the necessary service.

In many cases, simple problems can be solved with a replacement part that can be shipped directly to the dealer for professional installation / repair.

In the event that warranted factory service is required, Treasure Garden will assume the responsibility of the return freight charges on warranted product for the first year only.

Returned product that (upon receipt and inspection) is deemed to be "not covered" under our warranty, will be shipped / billed at your expense.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

NOTE: Failure caused by unreasonable or abusive use, or failure caused by neglect of reasonable and necessary care are not covered by this warranty.

Additionally, acts of nature (including but not limited to wind, hurricanes, tornadoes, and storms) are not covered by this warranty.

Note:

- Position the Serenata in a location that will protect it from direct sunlight and moisture.
- Charge the battery for 8 hours prior to first use.
- Do not overcharge the battery. Remove when indicator light turns green.

SAFETY PRECAUTIONS :

- If unit is exposed to light moisture, light to medium rain; allow unit to air dry for 24 hours before reuse.

WARNING: *The Serenata umbrella light is not waterproof.* If the light is immersed in a pool or spa or exposed to heavy rain the unit will be damaged and negate the 1 year warranty.



www.treasuregarden.com

©2011 Treasure Garden, Inc. - All Rights Reserved.

Initial 9/11