
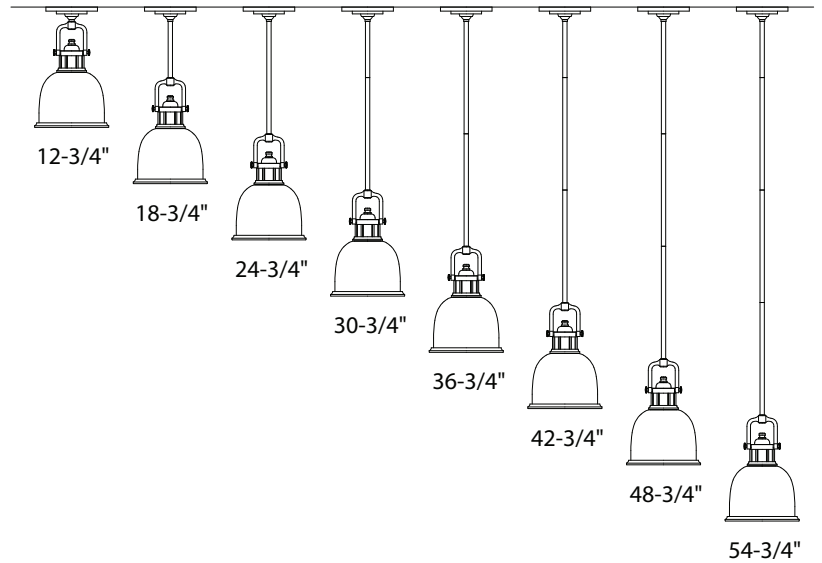


Assembly Instructions For


P1144 (E) 3/08

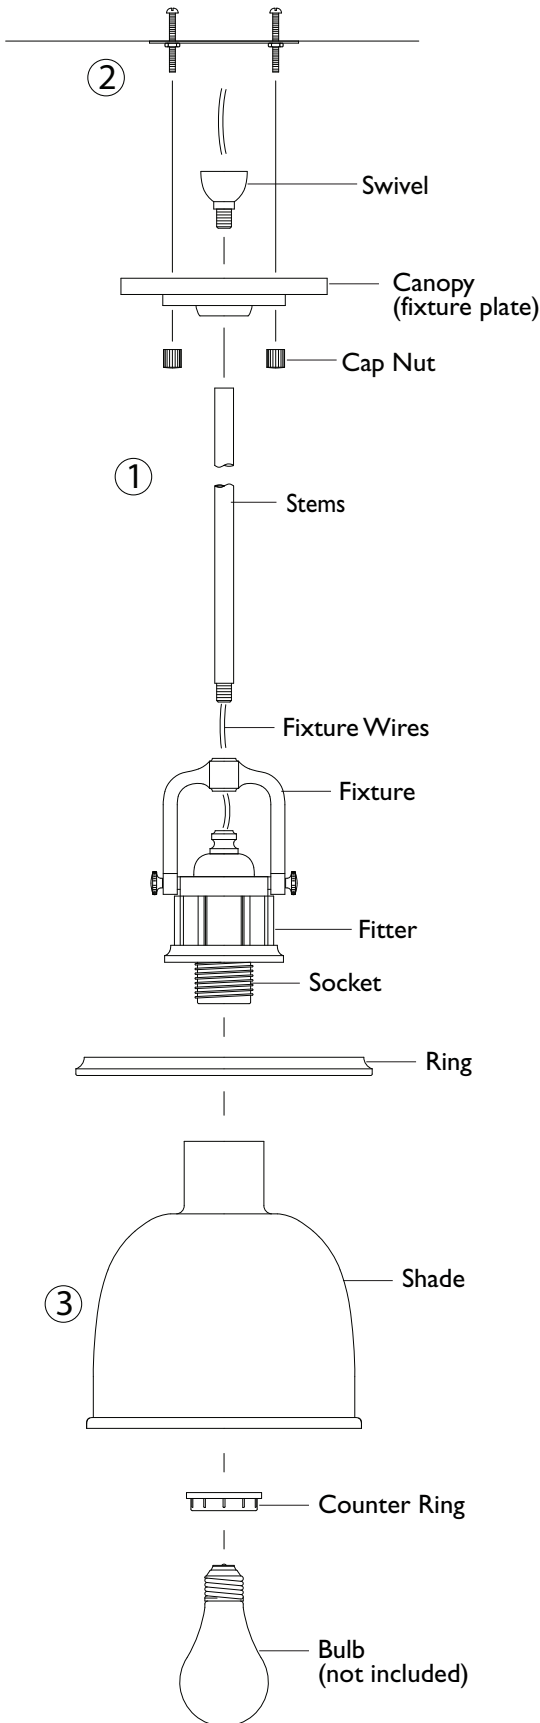

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Install stems:
 - A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stem together until secure.
 - B. Install bottom end of stem assembly by screwing into top of fixture.
 - C. Thread fixture wires through canopy and then swivel. Allow canopy to carefully slide down without scraping the surface of stems. Then install swivel by screwing onto top end of stem assembly.
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
3. A. Sit ring onto bottom section of shade. Note correct position from diagram.
 B. Install glass shade onto fitter by fastening with counter ring.
 C. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.

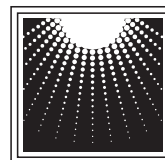

MURRAY
F E I S S
 Generation Brands™